

RAVEN EYE CUSTOM

RUGER 10/22[®] PERFORMANCE KITS

INSTALLATION INSTRUCTIONS - SHEET 2 OF 3


For P1, P2 and P3 Kits

READ PRIOR TO INSTALLATION


MAKE SURE YOUR FIREARM IS UNLOADED BEFORE DOING ANY WORK ON IT.

As the end user and installer of this product, you must accept full responsibility for the correct installation of this product and the resulting condition of your firearm. If you are unwilling to accept this, return the product to the address listed below for a full refund. If you are unable to install this product, seek the services of a qualified gunsmith, or send us an email to the address listed below and we can assist you.

Step 6 Put gun oil on the pins. This will help them go in smoother. Install the pins. **(H)** If they are tight, tap slowly in place with a blunt punch. Avoid pounding them in.




Step 7 The v-block **(I)** attaches the barrel to the action. Use the larger 5/32" hex wrench included to slowly and evenly remove the factory screws **(J)** and then carefully remove the v-block.

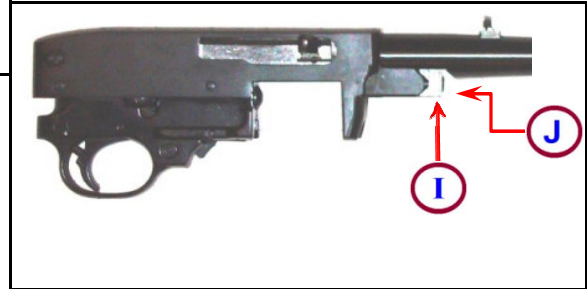

Step 8 Check for corrosion. If present, clean the action threads, v-block, and barrel recess using an appropriate solvent.

Step 9 Install the V-block, being careful to center the block in the recess. Insert each of the new screws **(K)** and tighten using fingers (not tight). Once both screws are finger tightened, STOP. Read the **HEX WRENCH NOTES** on the next page.

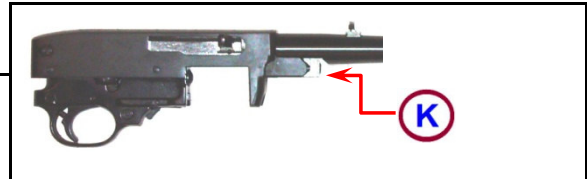

(CONTINUED ON SHEET 3)

BE SAFE!

RAVEN EYE CUSTOM

www.RavenEyeCustom.com

P.O. BOX 150083 LAKEWOOD COLORADO 80215

info@raveneyecustom.com

Copyright 2011

Revised September 9, 2011

